


1



Install Software

1. Insert the kit CD in the CD drive of your PC.
2. Install the ISSP Programmer software.


2

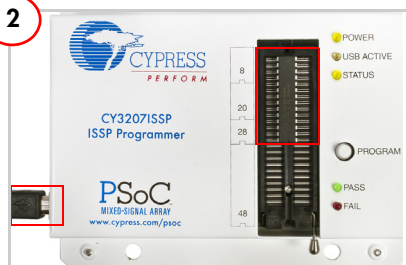

Socket Programming

1. Connect the USB cable between the PC and the programmer.
2. Open the ISSP Programmer and update the kit firmware.
3. Place the silicon in the ZIF socket; initiate programming from the ISSP Programmer.

3

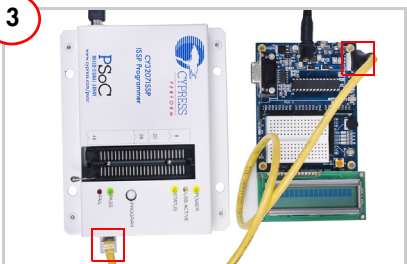

In-System Programming

1. Connect the ISSP cable between the RJ45 connector of the ISSP board and the ISSP header on the target board.
2. Initiate programming.

4




Standalone Programming

1. Unplug the USB cable and plug in the power cable.
2. Place the silicon in the ZIF socket and press the Program button to initiate programming.

Note: See the user guide for more information on programming modes.

ISSP Programmer Board Details

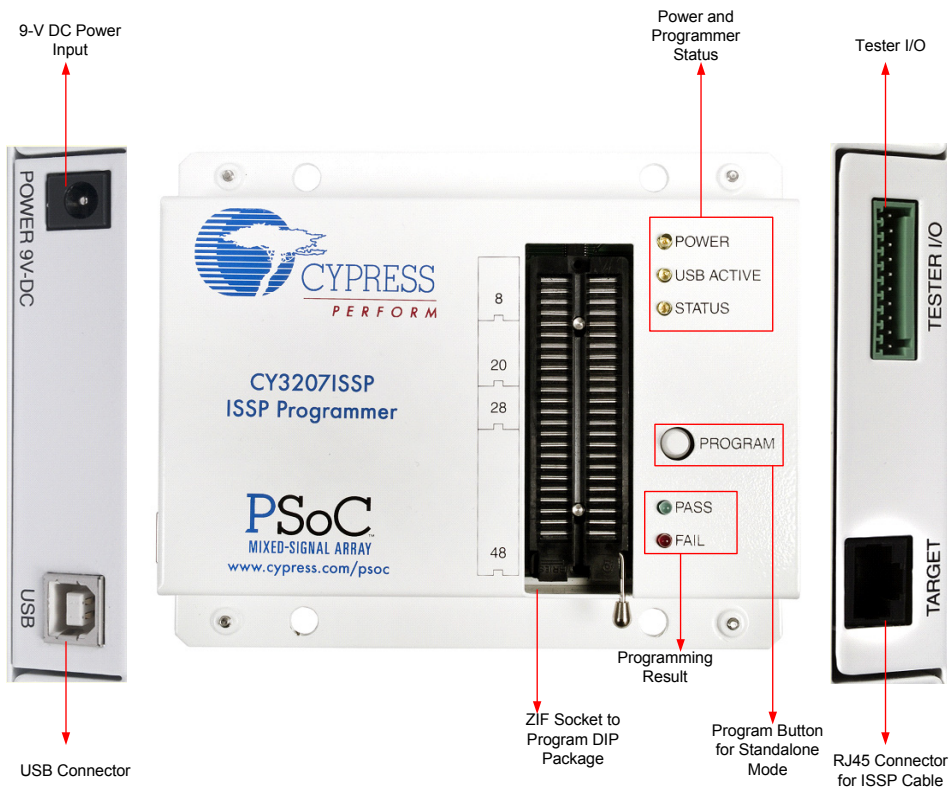

For the latest information about this kit, visit
www.cypress.com/go/CY3207-ISSP

