


**PGR-4700 MANUAL**  
**SENSITIVE GROUND-FAULT RELAY**  
**REVISION 2-A-073115**

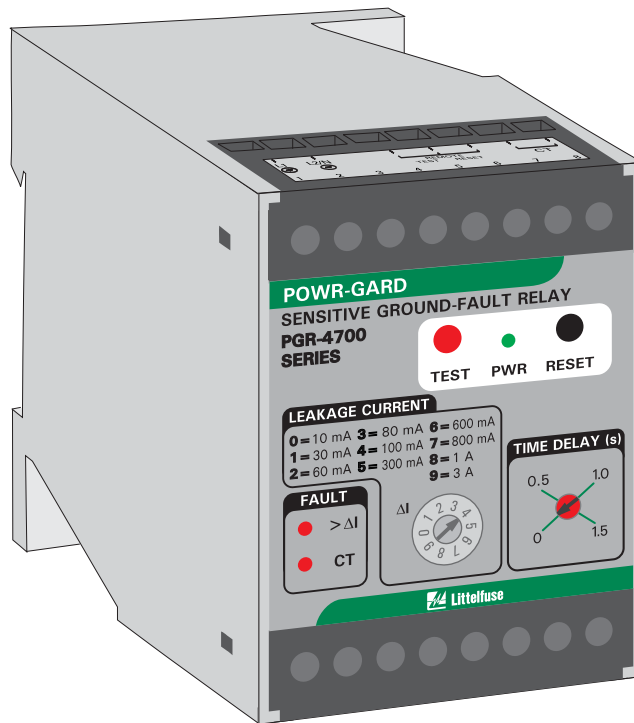

Copyright © 2015 by Littelfuse, Inc.

All rights reserved.

This page intentionally left blank.



**TABLE OF CONTENTS**

<b>SECTION</b>		<b>PAGE</b>
<b>1</b>	<b>General</b> .....	1
<b>2</b>	<b>Operation</b> .....	1
2.1	Relay Operating Mode.....	1
2.2	Front-Panel Controls.....	1
2.2.1	Ground-Fault Trip Level.....	1
2.2.2	Ground-Fault Trip Time.....	1
2.2.3	Reset.....	1
2.2.4	Test.....	1
2.3	Front-Panel Indication.....	1
2.3.1	Power.....	1
2.3.2	> $\Delta I$ .....	1
2.3.3	CT.....	1
2.4	Analog Output.....	1
2.5	Remote Test.....	1
2.6	Remote Reset.....	3
2.7	CT Verification.....	3
<b>3</b>	<b>Installation</b> .....	3
<b>4</b>	<b>Technical Specifications</b> .....	7
<b>5</b>	<b>Ordering Information</b> .....	8
<b>6</b>	<b>Warranty</b> .....	8
<b>7</b>	<b>Performance Test</b> .....	9
<b>Appendix A PGR-4700 Revision History</b> .....		10

**LIST OF FIGURES**

<b>FIGURE</b>		<b>PAGE</b>
1	PGR-4700 Outline and Mounting Details.....	2
2	Typical Connection Diagram.....	3
3	PGC-5000-Series Current Transformers.....	4
4	PMA-55 Panel-Mount Adapter.....	5
5	PMA-60 Panel-Mount Adapter.....	6
6	PGA-0500 Analog Percent Current Meter.....	7
7	Ground-Fault-Test Circuit.....	9

**LIST OF TABLES**

<b>TABLE</b>		<b>PAGE</b>
1	Ground-Fault-Test Record.....	9

**DISCLAIMER**

Specifications are subject to change without notice. Littelfuse, Inc. is not liable for contingent or consequential damages, or for expenses sustained as a result of incorrect application, incorrect adjustment, or a malfunction.

This page intentionally left blank.

## 1. GENERAL

The PGR-4700 is a ground-fault relay for ac power supply systems that require ground-fault detection as low as 10 mA. It is suited for sensitive ground-fault protection on systems with significant harmonic content. Its output relays can operate in the fail-safe or non-fail-safe mode for undervoltage or shunt-trip applications. The PGR-4700 has two sets of normally open / normally closed relay contacts for use in independent control circuits. Additional features include LED trip and power indication, autoreset or latching trips with front-panel and remote reset, test switch, 0- to 1-mA analog output, CT verification with LED indication, a digital trip-level switch, and a trip-time setting.

Ground-fault current is sensed by a PGC-5000-series core-balance current transformer (CT). The trip level of the ground-fault circuit is digital-switch selectable from 10 mA to 3 A. Trip time is adjustable from 0 to 1.5 s.

## 2. OPERATION

### 2.1 RELAY OPERATING MODE

The relay-operating-mode switch is located behind the front panel. See Fig. 1. Disconnect supply voltage before accessing switch. The front panel snaps into the terminal block and can be removed using a screw driver. In the fail-safe mode (switch open), the output relay energizes when the ground-fault circuit is not tripped. Fail-safe mode is the factory setting.

In the non-fail-safe mode (switch closed), the output relay energizes when a ground-fault trip occurs.

### 2.2 FRONT-PANEL CONTROLS

#### 2.2.1 GROUND-FAULT TRIP LEVEL

The  $\Delta I$  selector switch is used to set the ground-fault trip level from 10 mA to 3 A. For ground-fault detection, the switch setting must be set substantially below the prospective ground-fault current. To avoid sympathetic tripping, the switch setting must be above the charging current of the protected feeder.

#### 2.2.2 GROUND-FAULT TRIP TIME

The PGR-4700 has a definite-time trip characteristic. In tripping systems, the TIME DELAY selector is used to set the ground-fault trip time for coordination with upstream and downstream ground-fault devices. Trip time is selectable from 0 to 1.5 s. Coordination requires the same trip level for all ground-fault devices in a system and the trip time to progressively increase upstream. The amount of equipment removed from the system will be a minimum if the first ground-fault device to operate is the one immediately upstream from the fault.

### 2.2.3 RESET

The front-panel RESET button is used to reset latching trips. When remote-reset terminals 5 and 6 are connected, a trip remains latched until the RESET button is pressed or the remote-reset terminals are momentarily opened. Cycling the supply voltage will also reset the PGR-4700.

If the remote-reset terminals are not connected, the PGR-4700 operates in non-latching mode and a trip will reset when the fault is removed.

Connect terminal 5 and 6 to allow latching operation and reset via the front panel.

### 2.2.4 TEST

The TEST button is used to test the ground-fault CT circuit, the indication, and the output relay. When the TEST button is pressed, the circuit will trip, the  $>\Delta I$  LED will light, and the output relay will operate. The analog output will indicate full scale (1 mA) during the test.

## 2.3 FRONT-PANEL INDICATION

### 2.3.1 POWER

The green LED labelled PWR indicates presence of supply voltage.

### 2.3.2 $>\Delta I$

The red LED labelled  $>\Delta I$  indicates a ground-fault trip.

### 2.3.3 CT

The red LED labelled CT indicates that a PGC-5000-series current transformer is not connected. See Section 2.7.

## 2.4 ANALOG OUTPUT

A non-isolated, 0- to 1-mA output (terminals 9 and 10) indicates ground-fault current sensed by the CT. The full-scale value corresponds to the ground-fault trip setting. For example, if the ground-fault trip setting is 30 mA, then 1 mA output will be indicated when the measured current is 30 mA. The output is linear between zero and full scale. See Figs. 2 and 6 for PGA-0500 meter details.

## 2.5 REMOTE TEST

Connect terminals 4 and 5 to remote test. See Section 2.2.4.

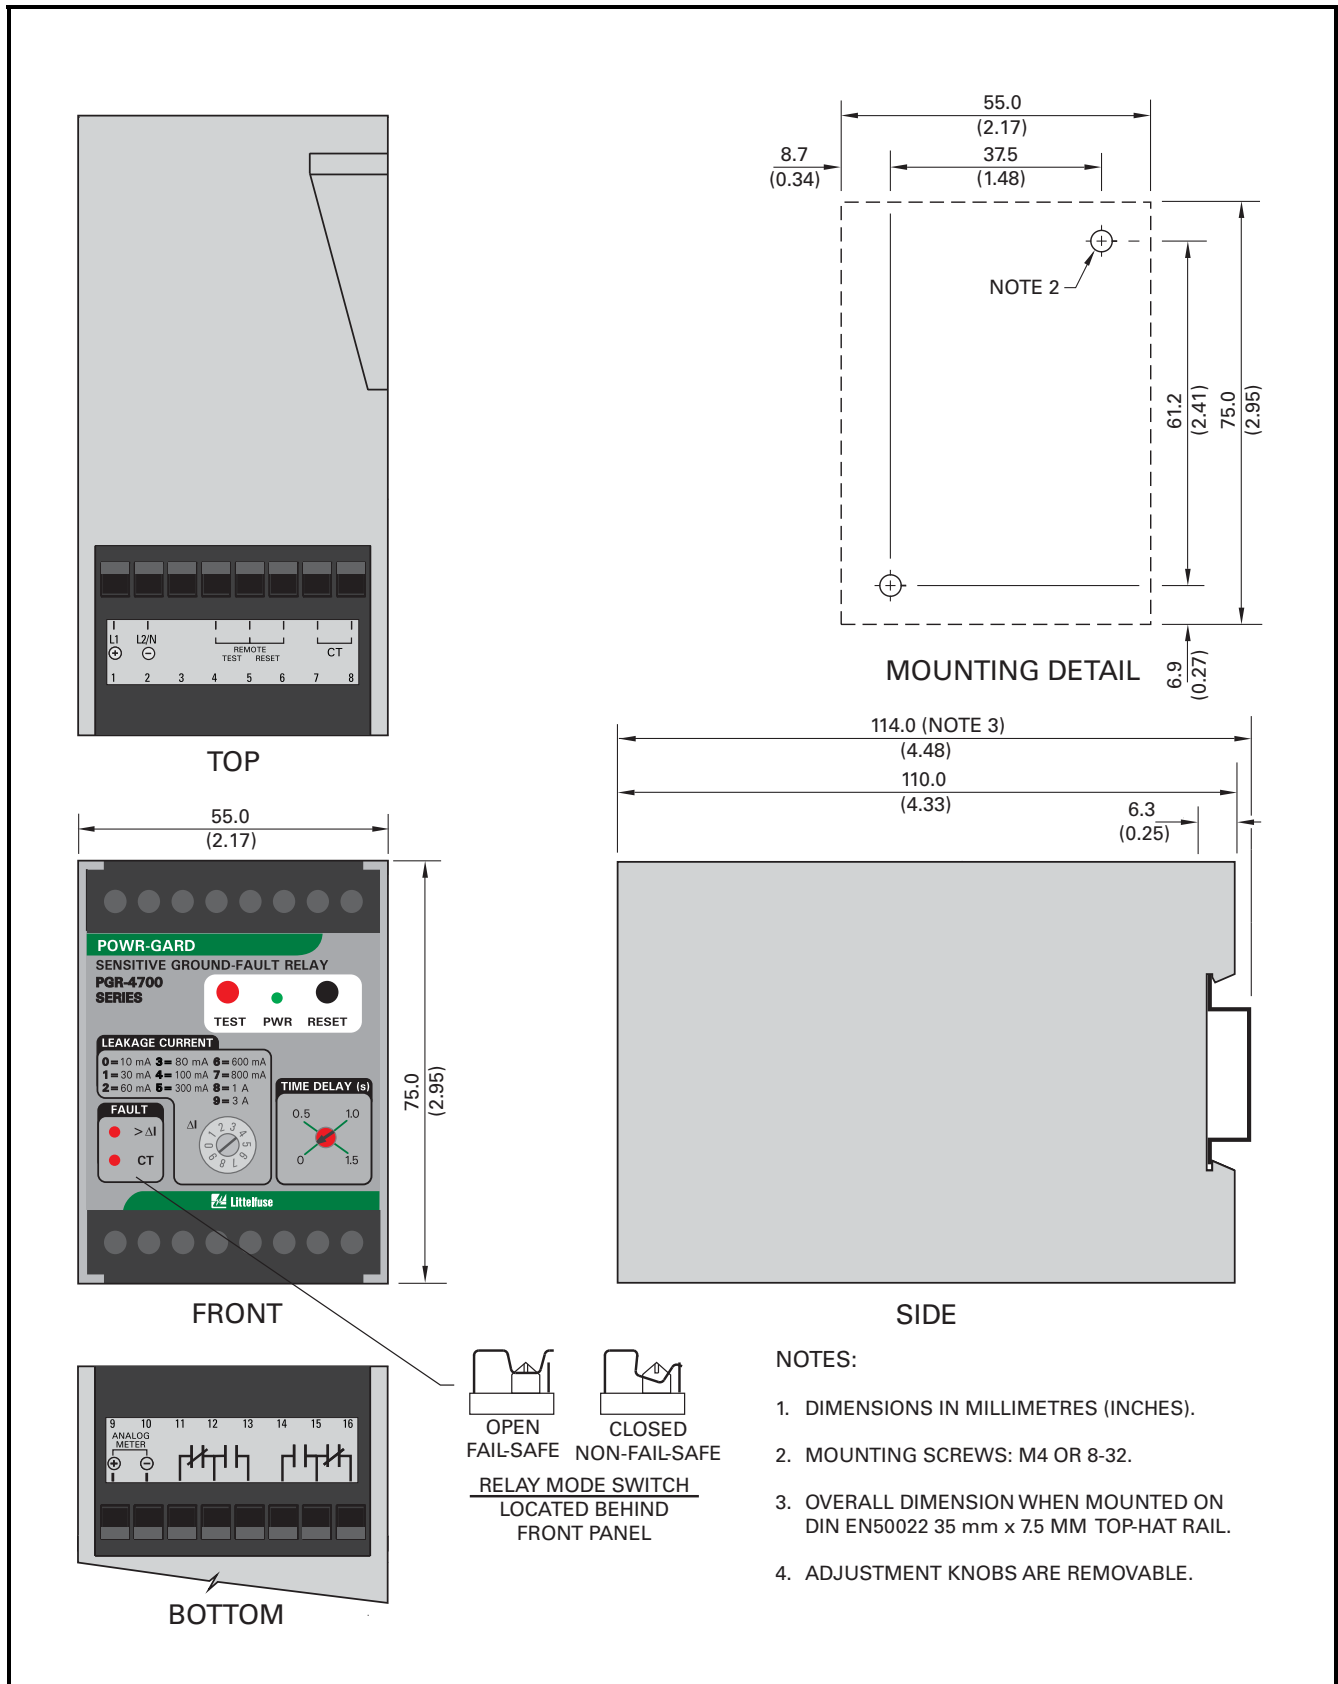


FIGURE 1. PGR-4700 Outline and Mounting Details.

## 2.6 REMOTE RESET

Terminals 5 and 6 are used for remote reset. A normally closed contact is required to configure the PGR-4700 for latching operation with remote reset. See Section 2.2.3.

## 2.7 CT VERIFICATION

A trip will occur and the red CT LED will light when a PGC-5000-series CT is not connected to terminals 7 and 8.

## 3. INSTALLATION

**NOTE:** Mounting, terminal block connections and wiring must conform to applicable local electrical codes. Check all applicable codes prior to installation.

This ground-fault monitoring system consists of a PGR-4700-series Sensitive Ground-Fault Relay and a PGC-5000-series CT connected as shown in Fig. 2.

A PGR-4700 can be surface or DIN-rail mounted. See Fig. 1. Panel mounting requires a PMA-55 or PMA-60 Panel-Mount Adapter. See Figs. 4 and 5.

Use terminal 1 (L1) as the line terminal on ac systems or the positive terminal on dc systems. Use terminal 2 (L2/N) as the neutral terminal on ac systems or the negative terminal on dc systems. There is no separate ground terminal for a ground wire.

Pass the phase conductors through the CT window and position them in the centre of the opening (for 4-wire and single-phase systems, also pass the neutral conductor through the CT window). Do not pass ground conductors through the CT window. In applications that require shields or drain wires to pass through the CT window, return them through the CT window before connecting them to ground. Connect the PGC-5000-series CT to terminals 7 and 8, and connect the shield to terminal 8. CT connections are not polarity sensitive. Certain applications require twisted- or shielded-twisted pair secondary CT conductors. See Fig. 3 for PGC-5000-series CT dimensional drawings.

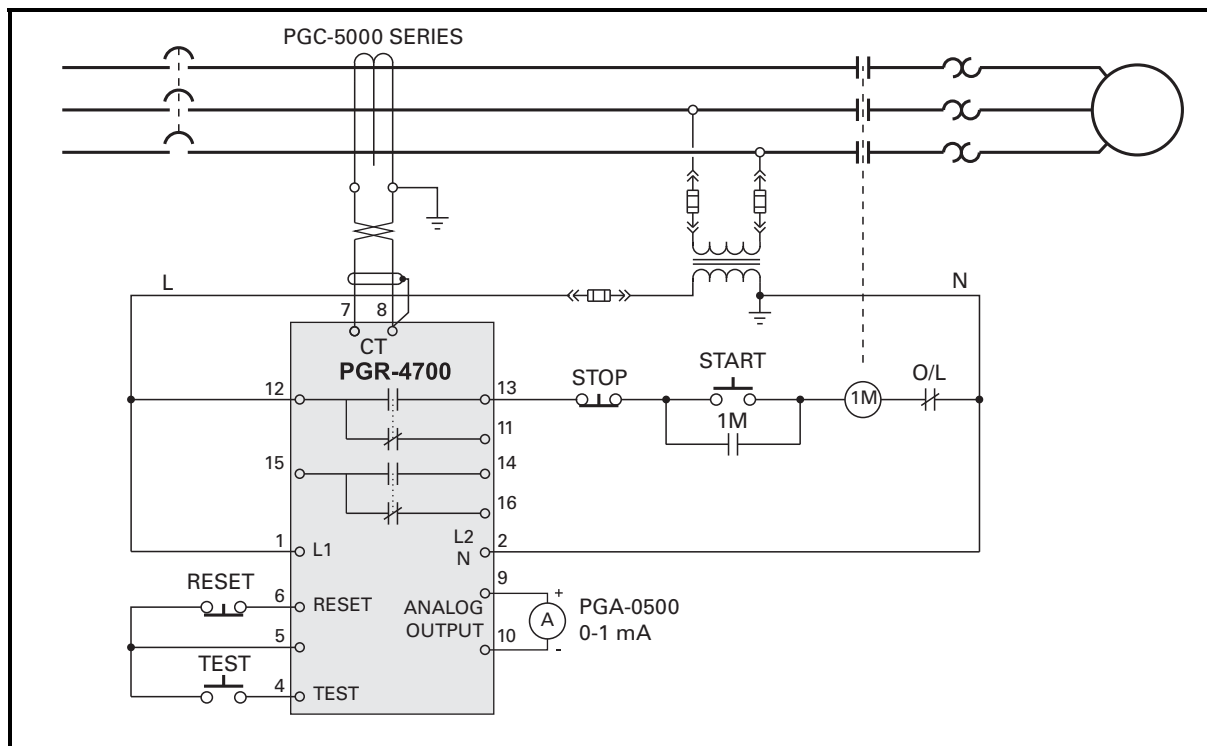


FIGURE 2. Typical Connection Diagram.

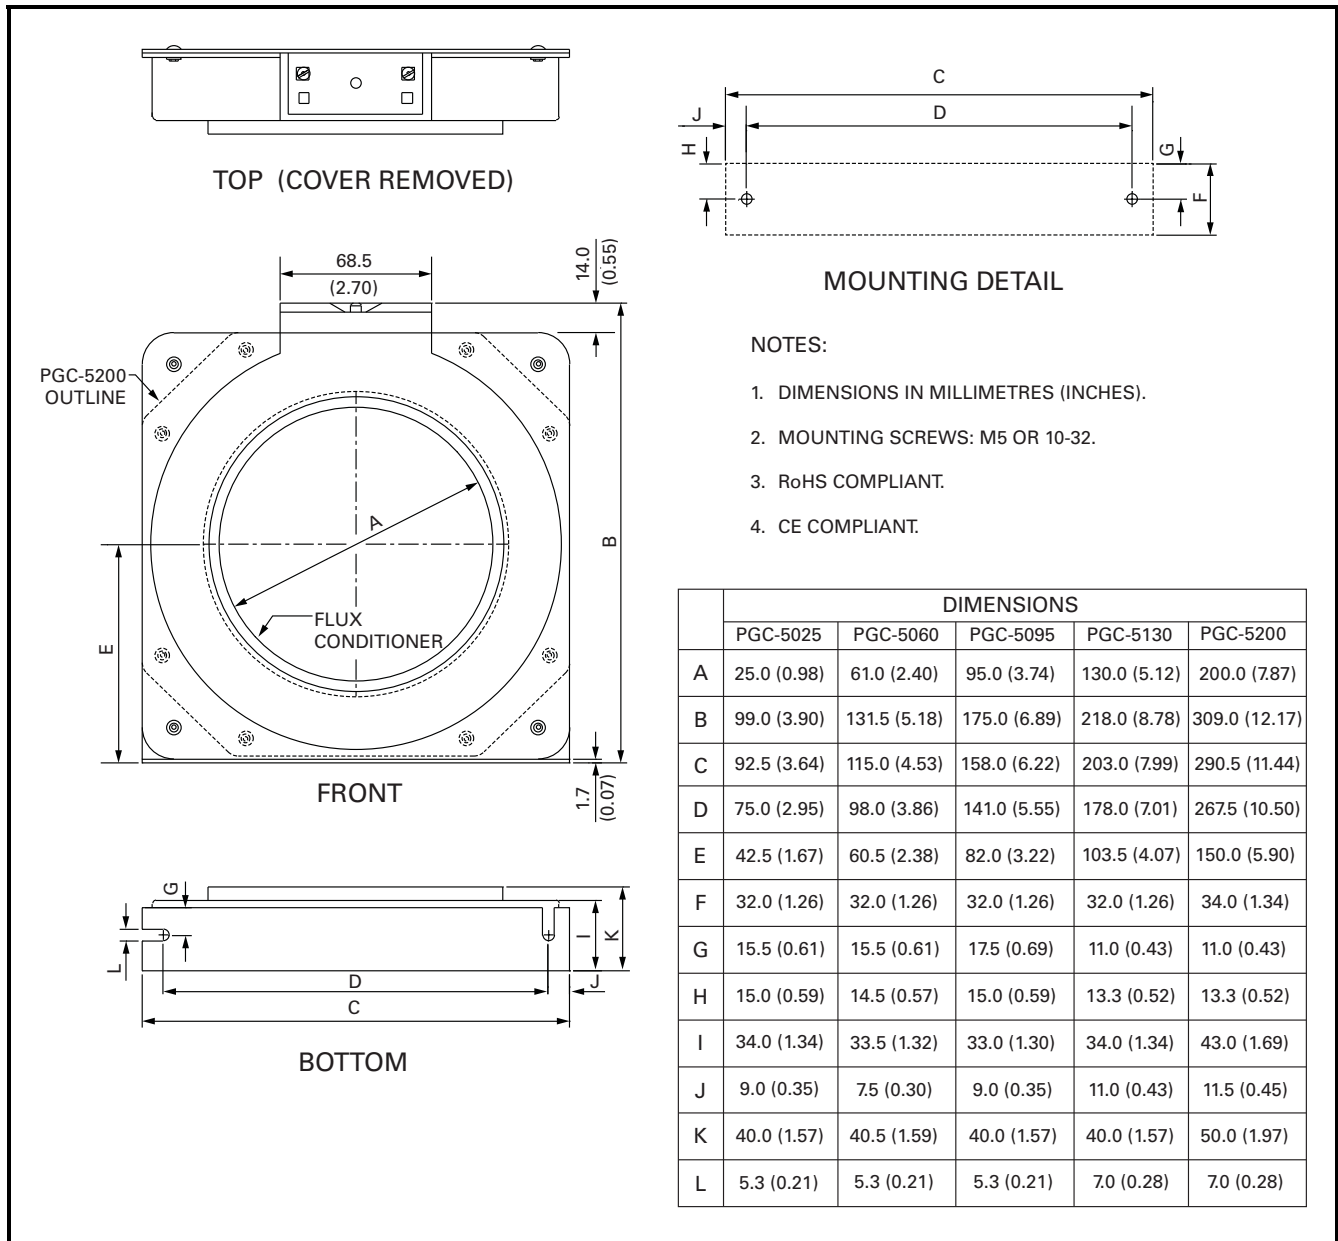


FIGURE 3. PGC-5000-Series Current Transformers.



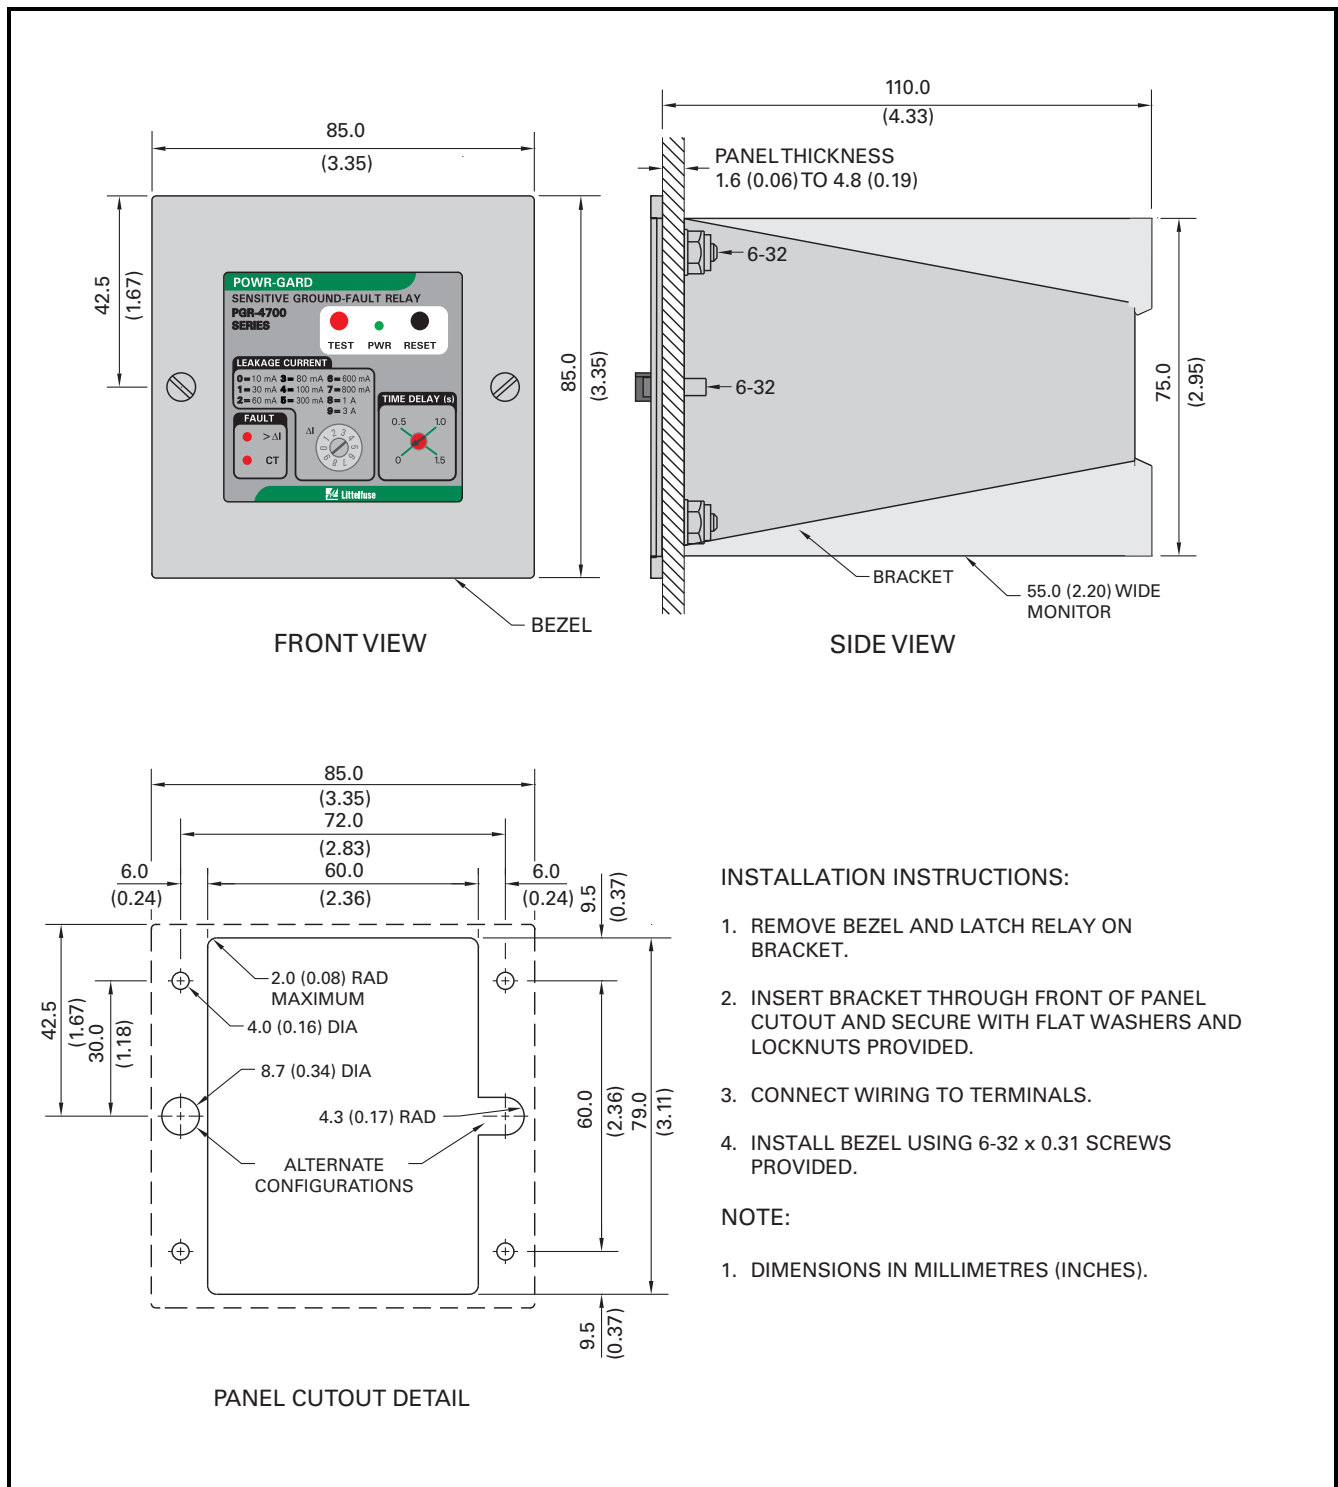


FIGURE 4. PMA-55 Panel-Mount Adapter.

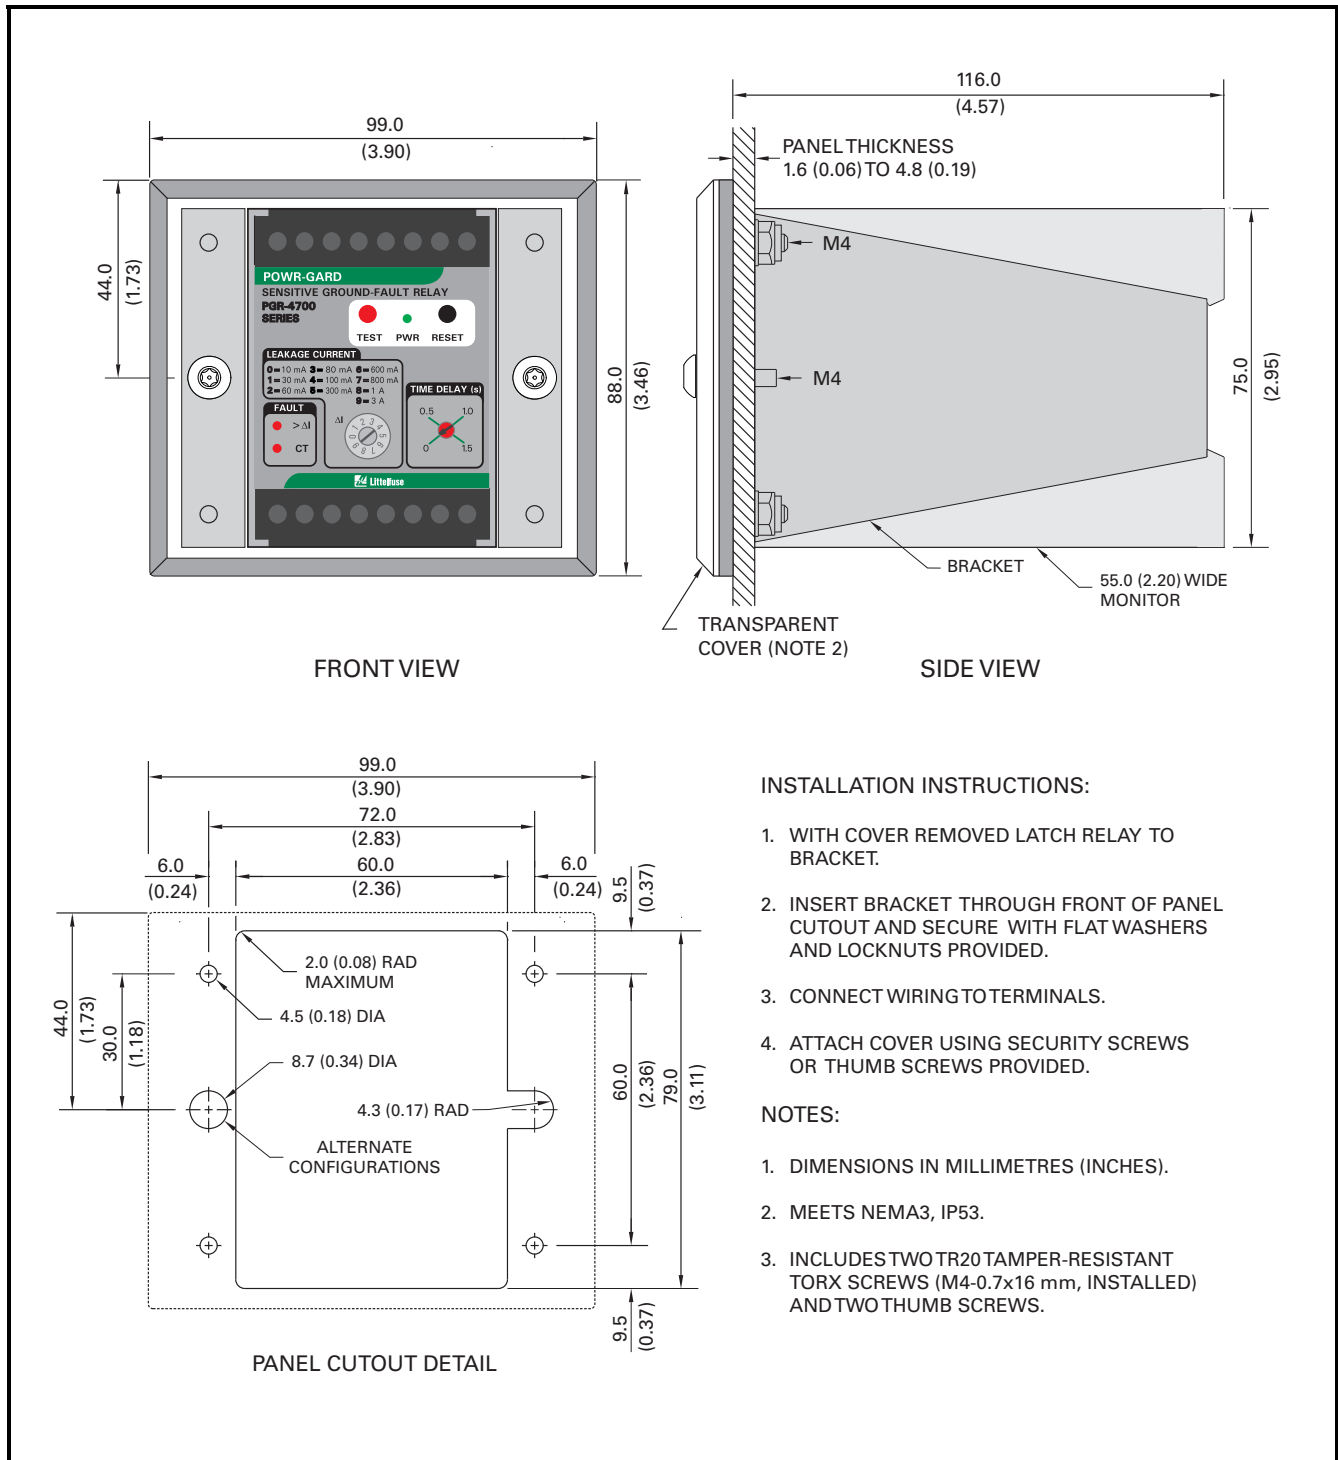


FIGURE 5. PMA-60 Panel-Mount Adapter.

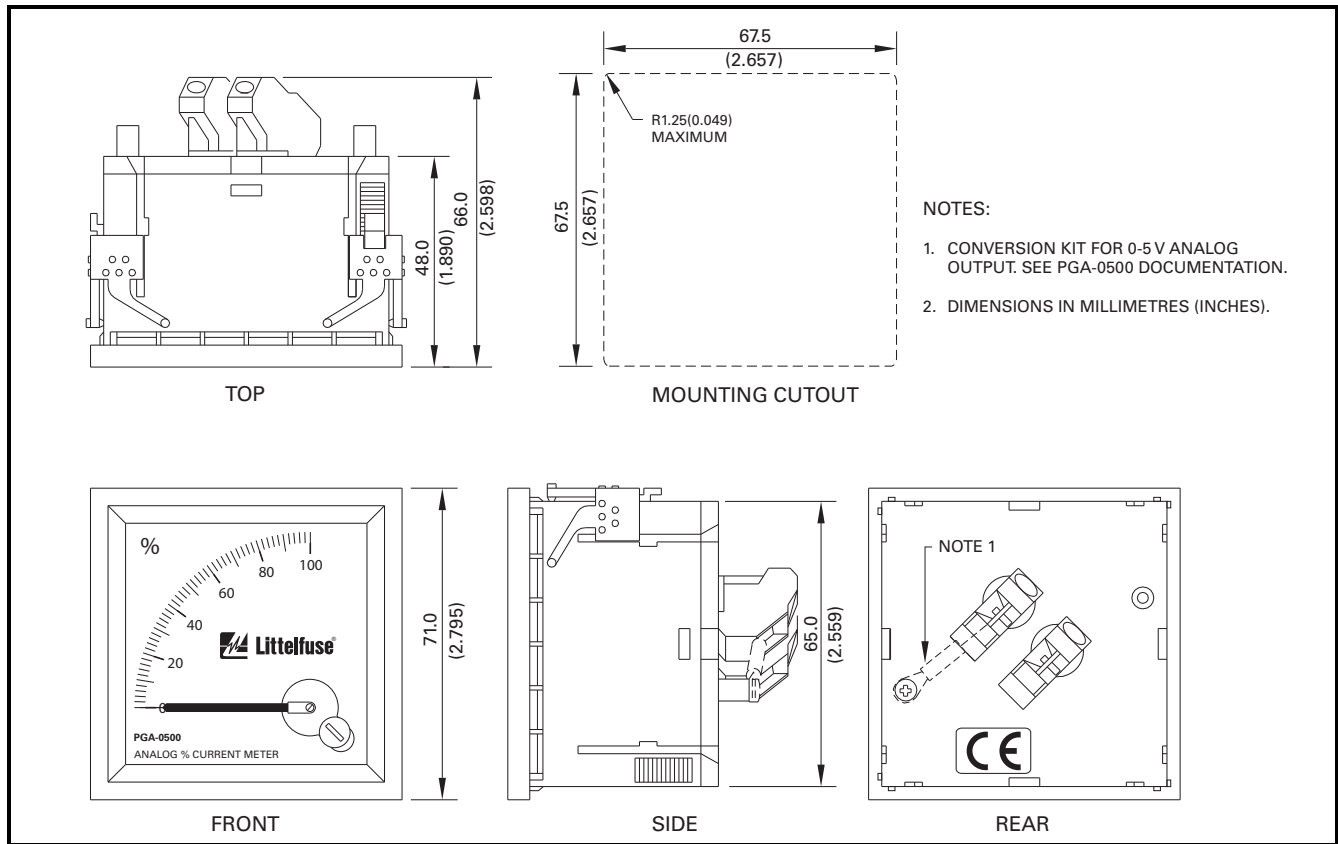


FIGURE 6. PGA-0500 Analog Percent Current Meter.

#### 4. TECHNICAL SPECIFICATIONS

Supply:

120 Option .....	4 VA, 120 Vac, (+10, -15%) 50/60 Hz
240 Option .....	4 VA, 240 Vac, (+10, -15%) 50/60 Hz
24 Option .....	3.0 W, 14 to 30 Vdc

Trip-Level Settings ( $\Delta I$ ) ..... 10, 30, 60, 80, 100, 300,  
600, 800, 1,000, and 3,000  
mA

Trip-Time Settings.....0 to 1,500 ms

Accuracies:<sup>(1, 2)</sup>

Trip Level:<sup>(3)</sup>

60 to 3,000 mA .....	$\pm 15\%$
30 mA .....	$\pm 10\%$
10 mA .....	$\pm 5\%$

Trip Time<sup>(4)</sup>

Minimum Setting.....	50 to 100 ms
Typical .....	$\pm 30\%$

Input:

3 dB Frequency	
Response .....	20 to 90 Hz
CT .....	PGC-5000-Series
CT Detection.....	Open-Circuit Detection
Thermal Withstand:	
Continuous .....	25-A Ground-Fault Current
1-Second .....	400-A Ground-Fault Current

Analog Output:

Mode .....	% of Trip-Level Setting
Range .....	0 to 1 mA dc

Reset.....Front-Panel Button and  
Remote N.C. Contact

Test.....Front-Panel Button and  
Remote N.O. Contact

**Output Relay:**

Contact Configuration .....2 Form C  
 Operating Mode.....Fail-Safe or Non-Fail-Safe  
 UL Rating .....5 A, 125 Vac Resistive

**Supplemental Contact Ratings:**

Carry Continuous .....5 A

Trip Mode .....Latching or Autoreset

Terminals .....Wire Clamping,  
 22 to 12 AWG  
 (0.3 to 3.3 mm<sup>2</sup>)  
 Conductors  
 Tightening Torque .....0.40 N-m (3.54 in-lb)

**Dimensions:**

Height.....75 mm (3.0")  
 Width .....55 mm (2.2")  
 Depth.....115 mm (4.5")

Shipping Weight.....0.45 kg (1 lb)

**Environment:**

Operating Temperature .....-10 to 60°C (14 to 140°F)  
 Storage Temperature .....-40 to 80°C (-40 to 176°F)  
 Humidity .....85% Non-Condensing

Certification .....UL Listed



UL508 Industrial Control Equipment



**NOTES:**

- (1) At 50 or 60 Hz unless otherwise noted.
- (2) PGC-5000-series CT included.
- (3) Maximum lead resistance of 2 Ω.
- (4) At 3 x trip-level setting.

**5. ORDERING INFORMATION**

**PGR-4700-**

Supply:  
 120 120-Vac Supply  
 240 240-Vac Supply<sup>(1)</sup>  
 24 24-Vdc Supply

- PGA-0500 .....Analog Percent Current Meter
- PGC-5025 .....Current Transformer,  
 25.0 mm (1.0") Window
- PGC-5060 .....Current Transformer,  
 60.8 mm (2.4") Window
- PGC-5095 .....Current Transformer,  
 95.0 mm (3.7") Window
- PGC-5130 .....Current Transformer,  
 130.0 mm (5.1") Window
- PGC-5200 .....Current Transformer,  
 200.0 mm (7.9") Window
- PMA-55 .....Panel-Mount Adapter, NEMA 1
- PMA-60 .....Panel-Mount Adapter, NEMA 3, IP53
- PMA-3 .....Adapter Plate, GEC/MCGG

Consult factory for custom mounting adapters.

**NOTES:**

- (1) UL not available for this ordering option.

**6. WARRANTY**

The PGR-4700 Sensitive Ground-Fault Relay is warranted to be free from defects in material and workmanship for a period of five years from the date of purchase.

Littelfuse will (at Littelfuse's option) repair, replace, or refund the original purchase price of an PGR-4700 that is determined by Littelfuse to be defective if it is returned to Littelfuse, freight prepaid, within the warranty period. This warranty does not apply to repairs required as a result of misuse, negligence, an accident, improper installation, tampering, or insufficient care. Littelfuse does not warrant products repaired or modified by non-Littelfuse personnel.





**APPENDIX A  
PGR-4700 REVISION HISTORY**

<b>MANUAL RELEASE DATE</b>	<b>MANUAL REVISION</b>	<b>PRODUCT REVISION (REVISION NUMBER ON PRODUCT LABEL)</b>
July 31, 2015	2-A-073115	00

**MANUAL REVISION HISTORY**

**REVISION 2-A-073115**

**SECTION 2**

Fig. 1 updated.

**SECTION 3**

PMA-55 and PMA-60 added.

**SECTION 5**

Ordering information updated.

**SECTION 7**

Fig. 7 updated.

**APPENDIX A**

Revision history added.

**PRODUCT REVISION HISTORY**

**PRODUCT REVISION 00**

UL Certification.